

Assembly instructions

Rear wheels to axle shaft

- Remove R clips from the axle shaft. Ensure that the axle shaft is clean and without grit or sand on the shaft (Figure 13)
- Align wheel centre with axle shaft (Figure 14)



Figure 13



Figure 14

- Slide on wheels so they contact the stop washer and refit the R clip (Figure 15 & 16)



Figure 15



Figure 16

All Communications to:

T (08) 9781 0444
E city@busselton.wa.gov.au

Locked Bag 1 Busselton WA 6280
www.busselton.wa.gov.au

*Where environment, lifestyle
and opportunity meet!*